



Examples Of Tinius Olsen 20kN Belt Attachments (HT43)



View of HT43 grips assembled with belt specimen and ready for test on H25KS machine

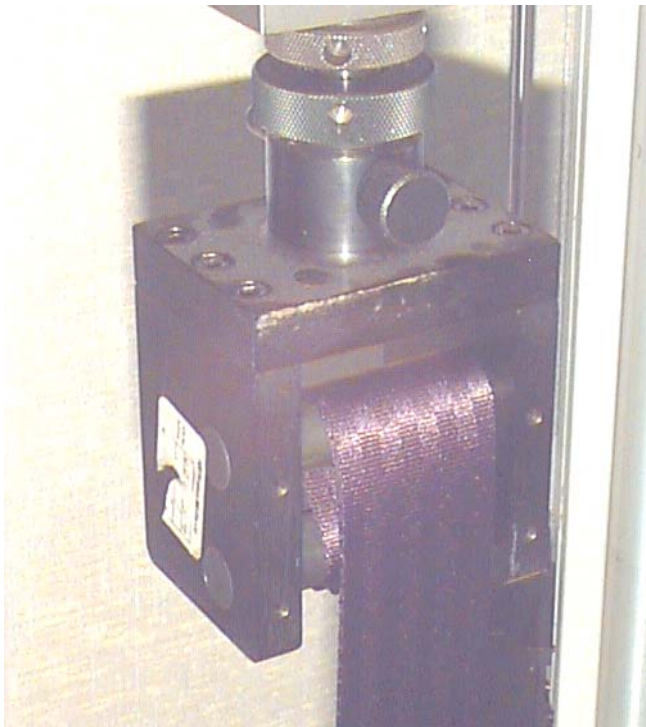

View of top HT43 belt grip attachment

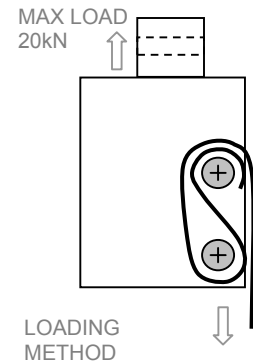

Application Information:

- 1) Tinius Olsen advises the use of '500L Laser extensometer' (for accurate extension measurement of gauge length).
- 2) The extension of these belts can be quite high, best to keep gauge length as low as possible (around 30cm).
- 3) If testing to break, the break will be rapid. Tinius Olsen also advises a protective screen.